


Front Canopy Template
(heat form over F6 jig)

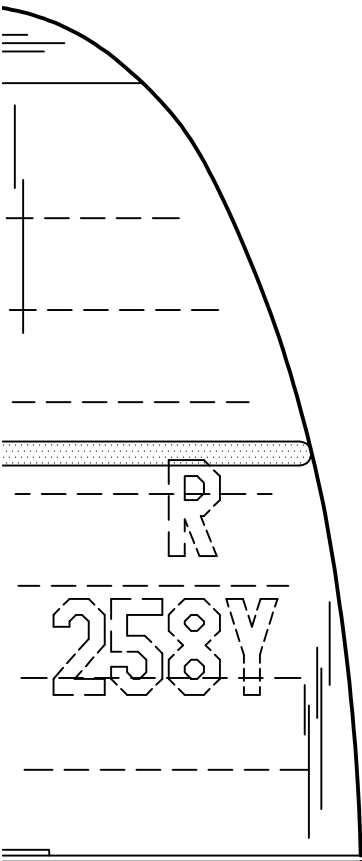

Balsa Block

1/64" Ply Stiffener

1/16" Balsa

F9